


Change Setting for AS10 / AS20

- 1 **Download & Install Driver**
<https://www.arkscan.com/images/products/AS10/SM3.zip>
 -Unzip and choose one of the drivers.

- 2 **Download & Install Utility Tool.**
https://www.arkscan.com/images/products/AS10/RFID_Setup_V2.03_FW_2.02.exe
 Pay attention where the install file goes and then run the Utility Tool.


- 3 **Connect the RFID device to Windows' computer via the provided USB cable**

Switch RFID device to Configuration Mode

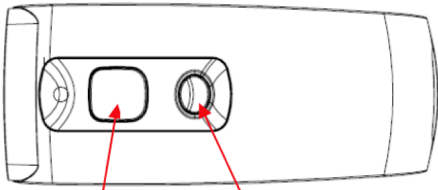



- 4 **Press down and hold down Function Button, and then press down and hold down Trigger Button for 5 seconds, then you should expect to hear two beeps for confirming Configuration Mode is enabled, then release both buttons**

- 5 **Verify if COM port of "STMicroelectronics" is enabled, and take note of COM port number; COM4 is RFID device's port for this example.**

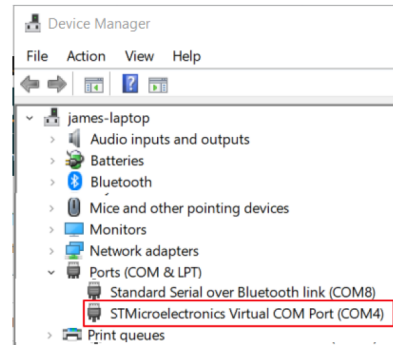


** It will not work if 'STMicroelectronics Virtual COM Port' is not shown, and 3 things to check: a) Configuration Mode enabled? b) Driver installed? c) RFID device is connected to computer via USB cable?*

- 6 **Run the Utility Tool which it was installed in step 2**

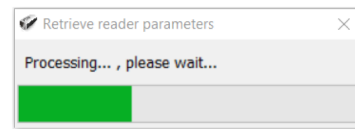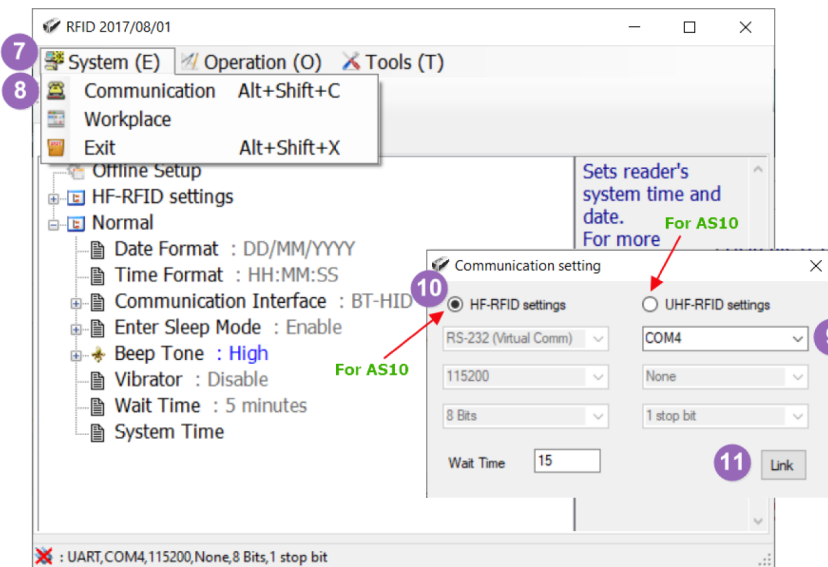

Retrieve RFID device's setting right after the device is connected under Configuration Mode

Make necessary settings change, and then click update to save settings

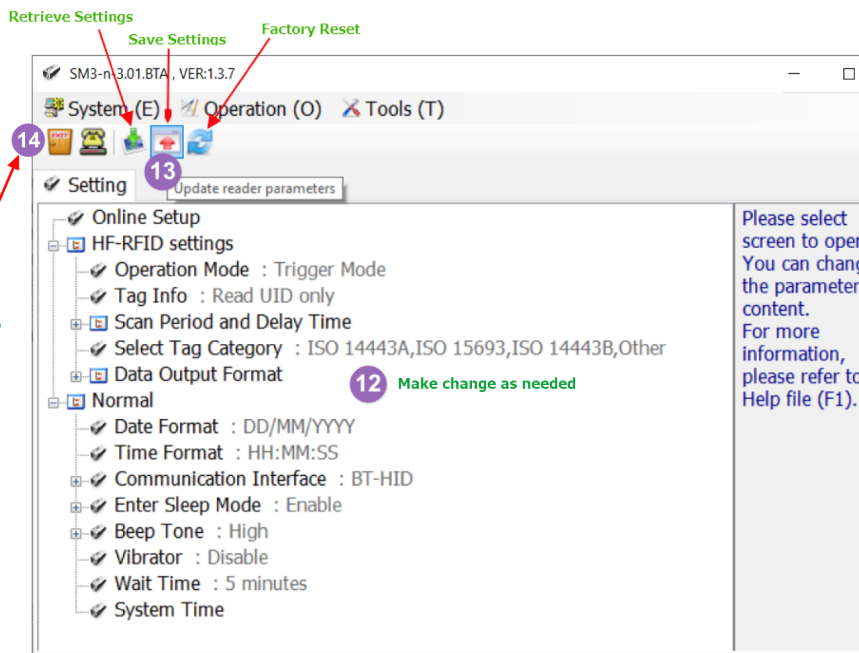

For more detail above instructions, please visit this page and under download tab.
<https://www.arkscan.com/as10>